




SAINT-GOBAIN

TYPICAL CONCRETE GUTTER BOX WATERPROOFING DETAIL

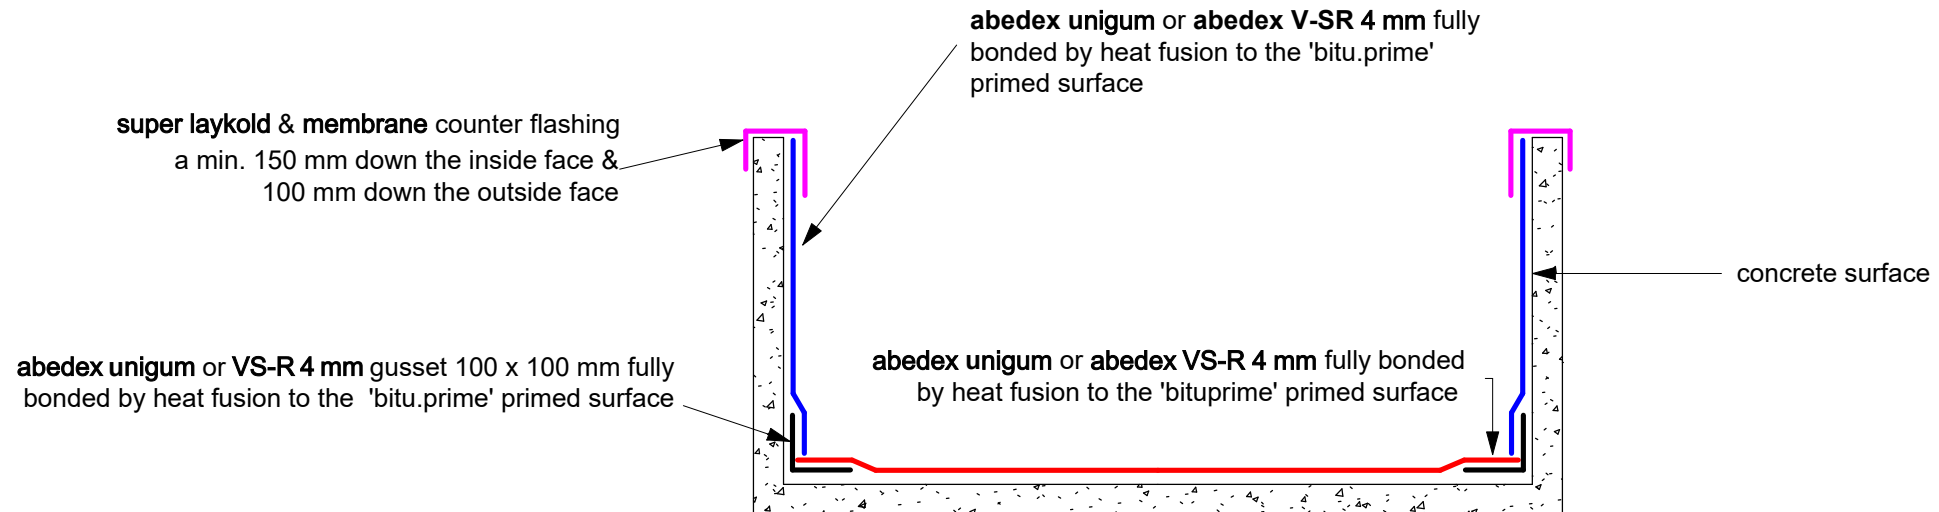

Note: Clean by high pressure water cleaning the entire surface to remove all curing compound, dirt, fungal growth etc. and allow to dry. All unsound material to be removed and repaired prior to waterproofing.

All exposed waterproofing detail to be coated with silvakote - minimum of 2 coats required.