




SAINT-GOBAIN

TYPICAL FULL BORE WATERPROOFING DETAIL USING MINERAL SLATE

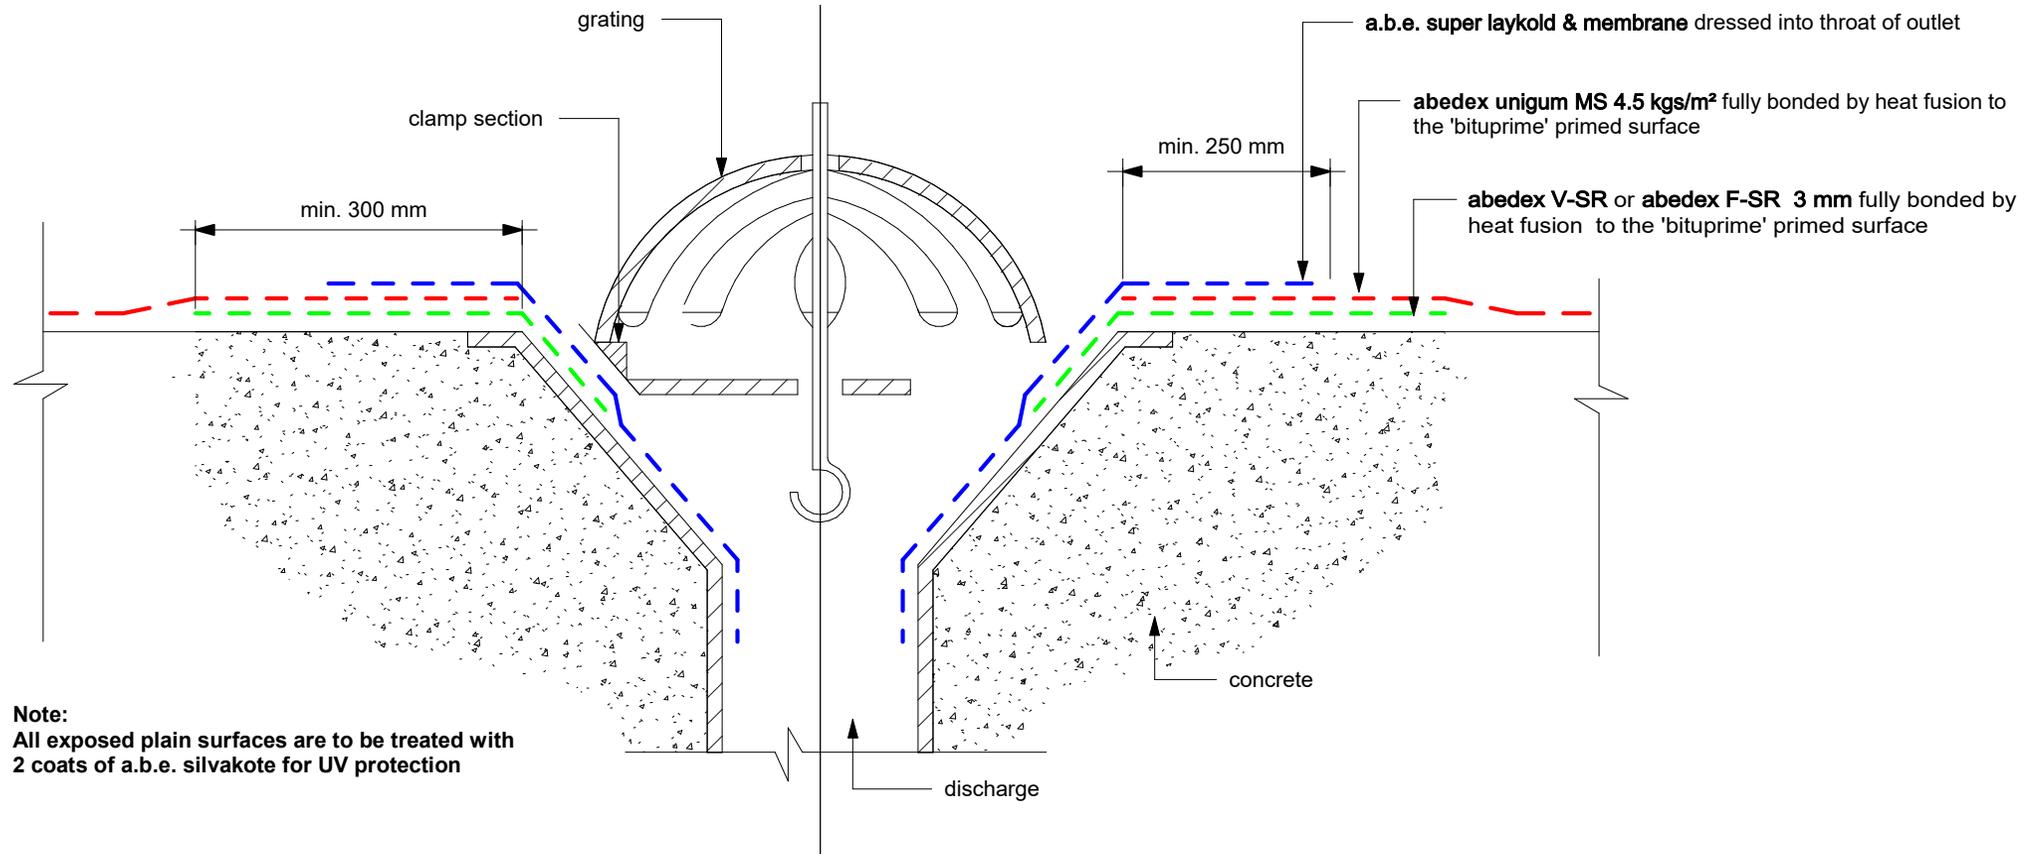

Note:
All exposed plain surfaces are to be treated with 2 coats of a.b.e. silvakote for UV protection